

Saveo-Scan-M22D-BH Advanced Settings



Reading Mode

The default setting for reading mode is **Single Scan**. To choose another mode please scan the appropriate barcodes below.

Single Scan (Default)



In this mode the scanner attempts to decode when the scan button is pressed.

Motion Sensor: Semi Auto Mode (LEDs On)



In this mode the scanner's aiming pattern and illumination LEDs will turn on when it senses motion. You will still need to press the scan button to decode.

Motion Sensor: Full Auto Mode



In this mode the scanner attempts to decode when it senses motion.

Motion Sensor: Semi Auto Mode



In this mode the scanner's aiming pattern will turn on when it senses motion. You will still need to press the scan button to decode.

Redundancy Level


This scanner offers two levels of decode redundancy. Select the higher redundancy level for poorer quality barcodes.

Redundancy Level 1



Barcode must be successfully read twice before being decoded

Redundancy Level 2

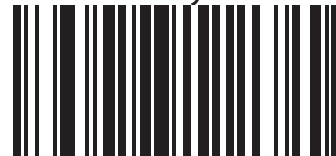

Barcode must be successfully read three times before being decoded

Transmission Speed

Transmission speed is dependent on your device. In order not to lose data please choose the correct speed. **Mid Speed** is the default.

High Speed Transmission



Ultra Low Speed 1 Transmission



Mid Speed Transmission (Default)



 
Ultra Low Speed 2 Transmission



Low Speed Transmission



Ultra Low Speed 3 Transmission



Keyboard Country

Scan the appropriate country code below to program the keyboard for your country or language. As a general rule, the following characters are not supported by the scanner for countries other than the United States: @ | \$ # { } [] = / ' \ < > ~



USA (Original setting)



Switzerland



Portugal



Norway



Italy



Hungary



Germany



France



Spain



Sweden



Vietnam





Denmark

Symbologies

Scan the following barcodes to enable/disable specific symbologies.

1D Symbologies

ENABLE 	<u>UPC-A</u>	DISABLE 	ENABLE 	<u>Discrete 25</u>	DISABLE 
ENABLE 	<u>UPC-E</u>	DISABLE 	ENABLE 	<u>CODABAR</u>	DISABLE 
ENABLE 	<u>EAN-8</u>	DISABLE 	ENABLE 	<u>MSI</u>	DISABLE 
ENABLE 	<u>EAN-13</u>	DISABLE 	ENABLE 	<u>Chinese 25</u>	DISABLE 
ENABLE 	<u>Code</u>	DISABLE 	ENABLE 	<u>Matrix 25</u>	DISABLE 
ENABLE 	<u>ISBT</u>	DISABLE 	ENABLE 	<u>GS1 DataBar</u>	DISABLE 
ENABLE 	<u>Code 39</u>	DISABLE 	ENABLE 	<u>Composite CC-C</u>	DISABLE 
ENABLE 	<u>Code 39 FULL ASCII</u>	DISABLE 	ENABLE 	<u>Composite CC-A/B</u>	DISABLE 
ENABLE 	<u>Trioptic Code 39</u>	DISABLE 	ENABLE 	<u>Composite TLC 39</u>	DISABLE 
ENABLE 	<u>Code 32</u>	DISABLE 			
ENABLE 	<u>CODE 93</u>	DISABLE 			
ENABLE 	<u>CODE 11</u>	DISABLE 			
ENABLE 	<u>Interleaved 25</u>	DISABLE 			

2D Symbolologies



PDF 417



Micro
PDF 417



Data Matrix



Maxicode



QR CODE



Micro
QR CODE



Aztec

