

Saveo-Scan-PKT-RCCD-BT Advanced Settings



Transmission Speed

Transmission speed is dependent on your device. In order not to lose data please choose the correct speed. **Mid Speed** is the default.

High Speed Transmission



Ultra Low Speed 1 Transmission



Mid Speed Transmission (Default)



Ultra Low Speed 2 Transmission



Low Speed Transmission



Ultra Low Speed 3 Transmission



RTC (Real Time Clock)

Scan the below configuration barcodes to enable the date & time stamp on the scanner.

Date Information: Enable



Time Information: Enable



Date Information: Disable



Time Information: Disable




Setting the date format

Date Format 1: MM/DD/YYYY (default)



Date Format 3: YYYY/MM/DD

 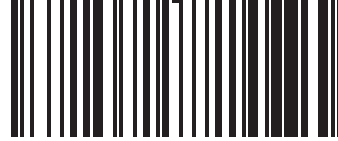


Date Format 2: DD/MM/YYYY



Punctuation used to separate barcode data, date and time

Tab (default)



Example: ABCD 01/23/2014 12:45:15

; Semicolon



Example: ABCD;01/23/2014;12:45:15

, Comma



Example: ABCD,01/23/2014,12:45:15

Setting the Date and Time

Set Date



Scan the **Set Date** barcode followed by the six numeric barcodes (overleaf) in the format MM/DD/YY from the numeric barcodes overleaf.

Set Time



Scan the **Set Time** barcode followed by the six numeric barcodes (overleaf) in the format HH:MM:SS from the numeric barcodes overleaf.
Time format is 24h
For example: "PM 3:25:30", please input

Increasing barcode length capacity

When using the RTC function, barcodes are limited to 20 digits by default. If barcode content is more than 20 digits, please scan the configuration barcode (below) followed by the numeric barcodes required (overleaf). (max. 99 digits)

Barcode length configuration



Keyboard Country

Scan the appropriate country code below to program the keyboard for your country or language. As a general rule, the following characters are not supported by the scanner for countries other than the United States: @ | \$ # { } [] = / ' \ < > ~

Keyboard Country Configuration



1. Scan **Keyboard Country Configuration** barcode.
2. Locate number for country from table (below).
3. Scan numeric barcodes (below) for the appropriate country.

Country/ Language	No.	Country/ Language	No.	Country/ Language	No.	Country/ Language	No.
U.S.	10	Poland	41	France	24	Turkey F	48
Latin America	11	Portugal	42	Germany	25	Turkey Q	49
Brazil	12	Russia	43	Netherlands	26	Japan	71
Belgium	20	Spain	44	Hungary	27	Korea	72
Bulgarian Latin	21	Switzerland French	45	Italy	28	Thai	73
Denmark	22	Switzerland German	46	Iceland	29	Vietnam	74
Finland	23	Sweden	47	Norway	30		

Numeric Barcodes



Configuration Barcodes

Use the following barcodes to start and end configuration process.

Scan **Start Configuration** barcode followed by the barcode for the setting you want to apply before scanning the **End Configuration** barcode.

Start Configuration



End Configuration



Reading Mode

The default setting for reading mode is **Single Scan**. To choose another mode please scan the appropriate barcodes below.

Double Check: Enable



Double Check: Disable



Double check repeats the reading and decoding of barcodes after a successful scan.

Beeper Frequency

Use the following barcodes to control the beeper pitch frequency.

High Pitched



Mid Pitched



Low Pitched



Symbologies

Scan the following barcodes to enable/disable specific symbologies.
Use the Start/End configuration barcodes to apply settings.

1D Symbologies

Start Configuration



End Configuration



ENABLE 	<u>Code 128</u>	DISABLE 	ENABLE 	<u>Code 39</u>	DISABLE 
ENABLE 	<u>Codebar</u>	DISABLE 	ENABLE 	<u>Code 39</u> <u>Start/Stop</u> <u>character</u>	DISABLE 
ENABLE 	<u>Interleave</u> <u>25</u>	DISABLE 	ENABLE 	<u>Code 39</u> <u>Full ASCII</u>	DISABLE 
ENABLE 	<u>Industrial</u> <u>25</u>	DISABLE 	ENABLE 	<u>Code 93</u>	DISABLE 
ENABLE 	<u>Matrix 25</u>	DISABLE 	ENABLE 	<u>ISSN</u>	DISABLE 
ENABLE 	<u>UCC/</u> <u>EAN 128</u>	DISABLE 	ENABLE 	<u>ISBN</u>	DISABLE 
ENABLE 	<u>MSI</u>	DISABLE 	ENABLE 	<u>GS1</u> <u>Databar</u>	DISABLE 
ENABLE 	<u>Plessey</u>	DISABLE 	ENABLE 	<u>GS1</u> <u>DataBar</u> <u>Limited</u>	DISABLE 
ENABLE 	<u>UPC-A</u>	DISABLE 	ENABLE 	<u>GS1</u> <u>DataBar</u> <u>Expanded</u>	DISABLE 
ENABLE 	<u>UPC-E</u>	DISABLE 	ENABLE 	<u>EAN-8</u>	DISABLE 
ENABLE 	<u>EAN-13</u>	DISABLE 	ENABLE 	<u>Code 11</u>	DISABLE 