





Transmission Speed

Transmission speed is dependent on your device. In order not to lose data please choose the correct speed. **Mid Speed** is the default.

High Speed Transmission



Mid Speed Transmission (Default)



Low Speed Transmission



Ultra Low Speed 1 Transmission



Ultra Low Speed 2 Transmission



Ultra Low Speed 3 Transmission





Keyboard Country

Scan the appropriate country code below to program the keyboard for your country or language. As a general rule, the following characters are not supported by the scanner for countries other than the United States: @ $| $ # { } [] = /' \setminus < > \sim$











Switzerland



Italy



France



Vietnam



Portugal



Hungary



S pain



Denmark



Configuration Barcodes

Use the following barcodes to start and end configuration process.

Scan Start Configuration barcode followed by the barcode for the setting you want to apply before scanning the **End Configuration** barcode.

To abort at any stage of the setup process scan the **Abort Configuration** barcode.







Reading Mode

The default setting for reading mode is Single Scan. To choose another mode please scan the appropriate barcodes below.

Single Scan



Double Check: Enable



Double check repeats the reading and decoding of barcodes after a successful scan.

Single Scan (no trigger)



Double Check: Disable



Beeper Volume Level and Length

Use the following barcodes to control the beeper volume level and length.

High Volume



Mid Volume



Low Volume





Long Beep



Mid Length Beep







Symbologies


Scan the following barcodes to enable/disable specific symbologies. Use the Start/End configuration barcodes to apply settings.

1D Symbologies







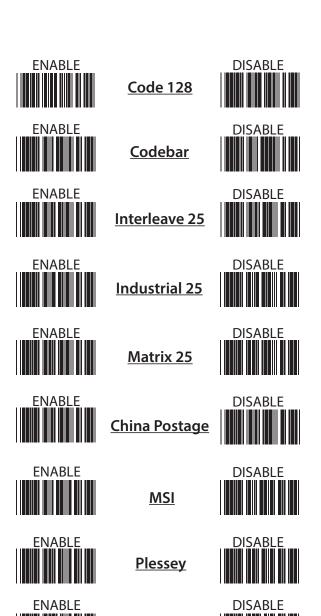

UPC-A

UPC-E

DISABLE

ENABLE

