





Transmission Speed

Transmission speed is dependent on your device. In order not to lose data please choose the correct speed. **Mid Speed** is the default.

High Speed Transmission



Mid Speed Transmission (Default)



Low Speed Transmission



Ultra Low Speed 1 Transmission



Ultra Low Speed 2 Transmission



Ultra Low Speed 3 Transmission





Keyboard Country

Scan the appropriate country code below to program the keyboard for your country or language. As a general rule, the following characters are not supported by the scanner for countries other than the United States: @ $| $ # { } [] = /' \setminus < > \sim$











Switzerland



Italy



France



Vietnam



Portugal



Hungary



S pain



Denmark



Configuration Barcodes

Use the following barcodes to start and end configuration process.

Scan Start Configuration barcode followed by the barcode for the setting you want to apply before scanning the End Configuration barcode.





Reading Mode

The default setting for reading mode is Single Scan. To choose another mode please scan the appropriate barcodes below.

Double Check: Enable



Double check repeats the reading and decoding of barcodes after a successful scan.

Double Check: Disable

Beeper Frequency

Use the following barcodes to control the beeper pitch frequency.

High Pitched



Mid Pitched



Low Pitched





Symbologies

Scan the following barcodes to enable/disable specific symbologies. Use the Start/End configuration barcodes to apply settings.

1D Symbologies



ENABLE

DISABLE

Code 11

DISABLE

EAN-13