

SAVEO OMNI II
SAVEO-OMN-S12D

USER MANUAL
Omnidirectional 2D Scanner

User Guide

Command Barcode

Scanning the **Enter Setup** Code can enable the engine to enter the setup mode. Then you can scan a number of command codes to configure your scanner. To exit the setup mode, scan the **Exit Setup** code.



Enter Configuration



Exit Configuration

Important Notes:

All configurations need to go through Enter/Exit steps except Factory Defaults. Scan “Enter Setup” → “Command Barcode” → “Exit Setup”

 
Restore Factory Default Configuration



Restore Factory Default Configuration

Enable All Symbologies

If Enable All Symbologies feature is enabled, the scanner will not be able to read any non-programming barcodes except the programming barcodes.

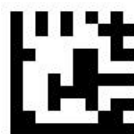

Enable All Symbologies

Scanning Mode

Trigger Mode (Default)

Scanning this bar code will enable the scanner to enter manual trigger mode.



Enter Configuration



Exit Configuration



****Trigger Mode**

Auto Sense Mode

Scanning this bar code will enable the scanner to enter auto sense mode.



Automatic Scanning Mode

Continuous Mode

This mode enables the engine to scan/capture, decode and transmit over and over again.



Continuous Scanning Mode

USB Interface (Optional)

USB HID-KBW

By default, the scanner is in HID mode as a Keyboard device. It works on a Plug and Play basis and no driver is required.



Enter Configuration



Exit Configuration



**USB HID Keyboard

USB COM Port Emulation

If you connect the scanner to the Host via a USB connection, the USB COM Port Emulation feature allows the host to receive data in the way as a serial port does. A driver is required for this feature



USB Virtual COM Port

Terminator Configuration

The scanner provides a shortcut for configuring the terminating character suffix to CR or CRLF and enabling it by scanning the appropriate barcode below.



Enter Configuration



Exit Configuration



No terminator



**CR/Enter



Tab

Convert Case

Example: When the **Convert All to Upper Case** feature is enabled, barcode data "AbC" is transmitted as "ABC".



Enter Configuration



Exit Configuration



** No Case Conversion



Convert All to Upper Case

SYMBOLOLOGIES

UPC / EAN , 2/5 Add-On Code

An UPC / EAN barcode can be augmented with a two-digit or five-digit add-on code to form a new one. In the examples below, the part surrounded by blue dotted line is an EAN-8 barcode while the part circled by red dotted line is add-on code.



EAN-8 With Add-On 5 Digits

 
UPC-A, UPC-E, EAN-13, and EAN-8 , with add-on 2/5codes




Enter Configuration



Exit Configuration

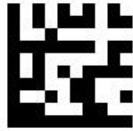

Enable UPC/EAN add-on 2/5 Digits

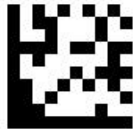 

**Disable UPC/EAN add-on 2/5 Digits

UPC-A



**Enable UPC-A



Disable UPC-A



 
** Transmit UPC-A Check Character




Enter Configuration




Exit Configuration

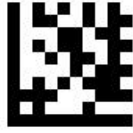


Do Not Transmit UPC-A Check Character

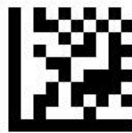 

**Enable UPC A Check Character

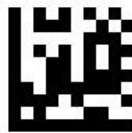 

Disable UPC A Check Character

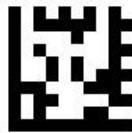 

Convert UPC-A into EAN 13



Enter Configuration

 


Exit Configuration




**Do not Convert UPC-A into EAN 13


UPC-E

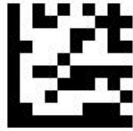

**Enable UPC-E

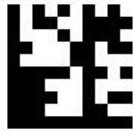 

Disable UPC-E

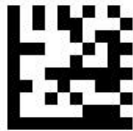 


**Enable UPC-E transmit check Character




Enter Configuration



 Exit Configuration

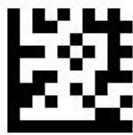

Disable UPC-E transmit check Character

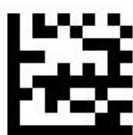 

**Enable UPC-E Check Character



Disable UPC-E Check Character



 
Convert UPC-E into UPC-A



Enter Configuration



Exit Configuration

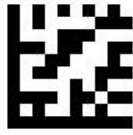

**Do not Convert UPC-E into UPC-A

 
EAN-8



** Enable EAN-8



Disable EAN-8

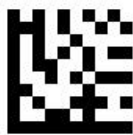


**Transmit Check Character After Verification




Enter Configuration



 
Exit Configuration

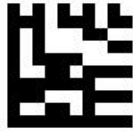

 Do Not Transmit Check Character After Verification

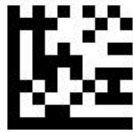

Convert EAN-8 into EAN-13

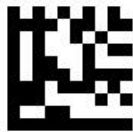 

** Do not Convert EAN-8 into EAN-13

EAN 13



**Enable EAN-13



 
Enter Configuration




Exit Configuration



Disable EAN-13

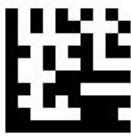

 **Transmit Check Character After Verification

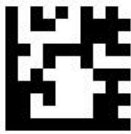

Do Not Transmit Check Character After Verification



 
Convert EAN-13 into ISBN




Enter Configuration




Exit Configuration

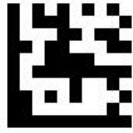

****Do not Convert EAN-13 into ISBN**

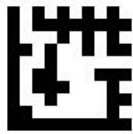 

Convert EAN-13 into ISSN

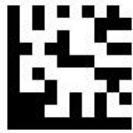 

****Do not Convert EAN-13 into ISSN**

Code 128



****Enable Code 128**



Enter Configuration



Exit Configuration




Disable Code 128


Code 39



 **Enable Code39

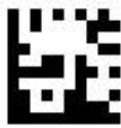

Disable Code39

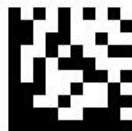 


Enable Code39 Full ASCII




Enter Configuration



 
Exit Configuration

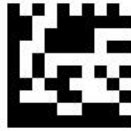

**Disable Code39 Full ASCII

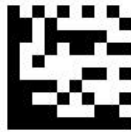 

Transmit Start/Stop Character

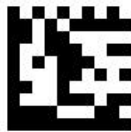 

** Do Not Transmit Start/Stop Character

Code 39



 
**Disable Code39 Check Digit



Enter Configuration



Exit Configuration

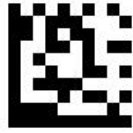

Transmit Check Character After Verification



Do Not Transmit Check Character After Verification

Code 93



Enable Code 93



**Disable Code 93

Code 32



Enter Configuration



Exit Configuration



Enable Code32



**Disable Code32

Code 11



Enable Code 11



 
**Disable Code 11




Enter Configuration



Exit Configuration

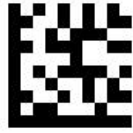

 ** Transmit Check Character After Verification

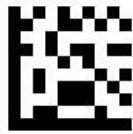

Do Not Transmit Check Character After Verification

Codabar



**Enable Codabar



Disable Codabar



Enter Configuration



 
Exit Configuration



**No Verification After Scan



Transmit Check Character After Verification

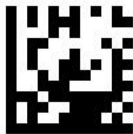

Do Not Transmit Check Character After Verification



Transmit Start/Stop Character



Enter Configuration



Exit Configuration



****Do not Transmit Start/Stop Character**

Plessey



****Enable Plessey**



****Disable Plessey**

MSI Plessey



****Enable MSI Plessey**



 
Enter Configuration



Exit Configuration



Disable MSI Plessey

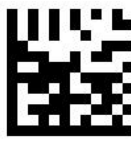

No Verification After Scan



Transmit Check Character After Verification



Do not Transmit Check Character After Verification

Interleaved 2 of 5



Enter Configuration



 
Exit Configuration



**Enable Interleaved 2 of 5



Disable Interleaved 2 of 5

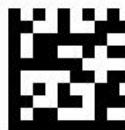

**No Verification After Scan



Transmit Check Character After Verification



Enter Configuration



Exit Configuration



Do not Transmit Check Character After Verification

IATA 2 of 5



Enable IATA 2 of 5



**Disable IATA 2 of 5

Matrix 2 of 5



Enable Matrix 2 of 5



Enter Configuration



Exit Configuration



**Disable Matrix 2 of 5

Straight 2 of 5



Enable Straight 2 of 5



**Disable Straight 2 of 5

Pharmacode



Enable Pharmacode 2 of 5



Enter Configuration



Exit Configuration



**Disable Pharmacode 2 of 5

RSS-14



**Enable RSS-14



Disable RSS-14



Enable RSS-14 Stacked



Enter Configuration



Exit Configuration



**Disable RSS-14 Stacked

RSS-14 Expanded



**Enable RSS-14 Expanded



Disable RSS-14 Expanded



Enable RSS-14 Expanded Stacked



Enter Configuration



Exit Configuration



**Disable RSS-14 Expanded Stacked

RSS-14 Limited



**Enable RSS-14 Limited



Disable RSS-14 Limited

Composite Code-A



Enable Composite Code-A



Enter Configuration

 


Exit Configuration




**Disable Composite Code-A

Composite Code-B

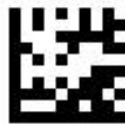


Enable Composite Code-B

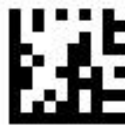 

**Disable Composite Code-B

 Composite Code-C

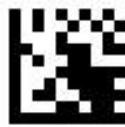

Enable Composite Code-C



Enter Configuration



Exit Configuration



**Disable Composite Code-C

PDF 417



**Enable PDF417



Disable PDF417

Micro PDF 417



**Enable Micro PDF 417



Enter Configuration



Exit Configuration



Disable Micro PDF 417

Data Matrix



**Enable Data Matrix



Disable Data Matrix

Rectangular Data Matrix



**Enable Rectangular Data Matrix



Enter Configuration



Exit Configuration



Disable Rectangular Data Matrix

QR



**Enable QR



Disable QR



**Data Outputs on Notepad or Excel



Enter Configuration



Exit Configuration



Multi-languages Output/ Data Outputs on Notepad or Excel

Important Note: If a QR code contains special letters like ß ü ì è you need to enable "**Multi-languages Output/ Data Outputs on Notepad or Excel**". A driver also required to be installed in order to decode the QR code. Please contact us to get the driver.



Code-page output/ Data Outputs on Word , QQ ,wechat

Micro QR



**Enable Micro QR



Enter Configuration

 


Exit Configuration



Disable QR

Aztec

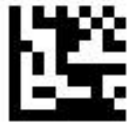

Enable Aztec



**Disable Aztec

MaxiCode



Enter Configuration



Exit Configuration

Enable MaxiCode



**Disable MaxiCode

Configure decoding length for different types of barcodes

- **Configure one decoding length.**

For example:

Configure scanner to decode Code 128 with the length of 14 characters

1. Scan Enter Configuration
2. Scan Code128 " Configure one decoding Length"
3. Scan 1 from ASCII Code Table
4. Scan 4 from ASCII Code Table
5. Scan Exit Configuration

- **Configure 2 different decoding lengths.**



Enter Configuration



Exit Configuration

For example:

Configure scanner to decode Code 128 with the length of 2 and 14 characters

1. Scan Enter Configuration
2. Scan Code128 " Configure Two Decoding Length"
3. Scan 0 from ASCII Code Table
4. Scan 2 from ASCII Code Table
5. Scan 1 from ASCII Code Table
6. Scan 4 from ASCII Code Table
- 7.Scan Exit Configuration

- **Configure Decoding Length Range.**

For example:

Configure scanner to decode Code 128 within the length from 8 to14 characters

1. Scan Enter Configuration
2. Scan Code128 " Configure Decoding Length Range"
3. Scan 0 from ASCII Code Table
4. Scan 8 from ASCII Code Table
5. Scan 1 from ASCII Code Table
6. Scan 4 from ASCII Code Table
- 7.Scan Exit Configuration

- **Configure Decoding Any Length**

For example:

Configure scanner to decode Code 128 with any length

1. Scan Enter Configuration
2. Scan Code128 " Decode Any Length"
- 3.Scan Exit Configuration

Code 128 Decoding Length



 
Configure one decoding Length




Enter Configuration




Exit Configuration

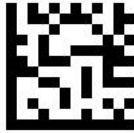

 Configure two different decoding Lengths

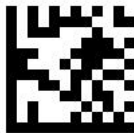


Configure Decoding Length Range

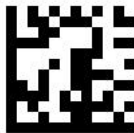 

**Decode Any length

 Code 39 Decoding Length

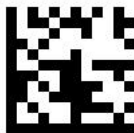

Configure one decoding Length



 
Enter Configuration




Exit Configuration



Configure two different decoding Lengths

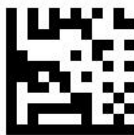

Configure decoding length range

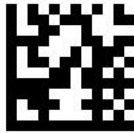 

** Decode Any Length

Code 93 Decoding Length



Configure one decoding Length



Enter Configuration



Exit Configuration



Configure two different decoding Lengths



Configure decoding length range



**Decode Any length

Codabar Decoding Length



Configure one decoding Length



Enter Configuration



Exit Configuration



Configure two different decoding Lengths



Configure decoding length range



**Decode Any length

Interleaved 2 of 5 Decoding Length



Configure one decoding Length



Enter Configuration



Exit Configuration



Configure two different decoding Lengths



Configure decoding length range



**Decode Any Length

Code 11 Configure decoding Length



Configure one decoding Length



Enter Configuration



Exit Configuration



Configure two different decoding Lengths



Configure decoding Length Range



**Decode Any Length

MSI Plessey Configure decoding Length



Configure one decoding Length



Enter Configuration



Exit Configuration



Configure two different decoding Lengths



Configure decoding length range



**Decode Any Length

Matrix 2 of 5 Configure decoding Length



Configure one decoding Length



Enter Configuration



Exit Configuration



Configure two different decoding Lengths



Configure decoding length range



**Decode Any length

AIM ID Prefix

If AIM ID prefix is enabled, the engine will add the symbology identifier before the scanned data after decoding. see the “**Appendix 1: AIM ID Table**” section



**Disable AIM ID



Enter Configuration



Exit Configuration



Enable AIM ID

Appendix 1: AIM ID Table

Symbology	Mexxen/Zebex	AIM
UPC-A	A	E
UPC-E	E	E
EAN-8	FF	E
EAN-13	F	E
Code 128	K	C
Code 39	M	A
Code 93	L	G
Code 32	M	A
Code 11	O	H
Codabar	N	F
Plessey	P	P
MSI/Plessey	a	M
Interleaved 2 of 5	I	I
IATA 2 of 5	Z	R
Matrix 2 of 5	G	X
Straight 2 of 5	S	S
Pharmacode	H	X
RSS 14	RS	e
RSS Expanded	RX	e
RSS Limited	RL	e




Enter Configuration



Exit Configuration

Composite CC-A	m	e
Composite CC-B	n	e
Composite CC-C	i	e
PDF417	r	L
Micro PDF417	s	L
Data Matrix	t	d
QR	u	Q
Micro QR	j	Q
Aztec	e	Z
MaxiCode	v	U

 Function Key Mapping

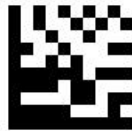


**Disable Function Key Mapping



Enter Configuration




 Exit Configuration

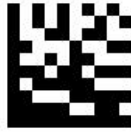

Enable Function Key Mapping

 Custom prefix for different types of barcodes

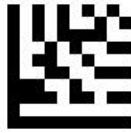


Add prefix to all types of barcodes



Enter Configuration




 Exit Configuration

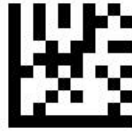


****Do not add prefix to types of barcodes**

 Configure prefix for UPC-A

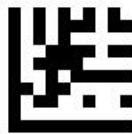

Enable Prefix Configuration for UPC-A

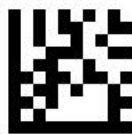 

Disable Prefix Configuration for UPC-A

 
Configure prefix for UPC-E




Enter Configuration



Exit Configuration

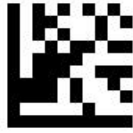


Enable Prefix configuration for UPC-E

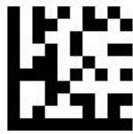 


Disable Prefix configuration for UPC-E

 Configure prefix for EAN-8

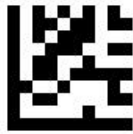

Enable Prefix Configuration for EAN-8

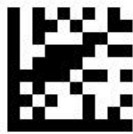 

Disable Prefix Configuration for EAN-8

 
Configure prefix for EAN-13




Enter Configuration



Exit Configuration

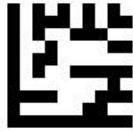


Enable Prefix Configuration for EAN-13

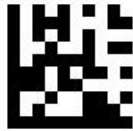 


Disable Prefix Configuration for EAN-13

 Configure prefix for Code128

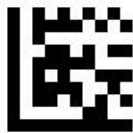

Enable Prefix Configuration for Code128

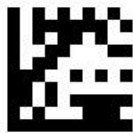 

Disable Prefix Configuration for Code128

 
Configure prefix for Code39




Enter Configuration



Exit Configuration

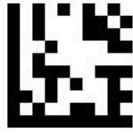

Enable Prefix Configuration for Code 39

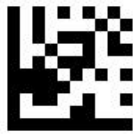 

Disable Prefix Configuration for Code 39

Configure prefix for Code93



Enable Prefix Configuration for Code 93



Disable Prefix Configuration for Code 93

Configure prefix for Code32



Enter Configuration



Exit Configuration



Enable Prefix Configuration for Code32



Disable Prefix Configuration for Code32

Configure prefix for Code11



Enable Prefix Configuration for Code 11



Disable Prefix Configuration for Code 11

Configure prefix for Codabar



Enter Configuration



Exit Configuration



Enable Prefix Configuration for Codabar



Disable Prefix Configuration for Codabar

Configure prefix for Plessey



Enable Prefix Configuration for Plessey



Disable Prefix Configuration for Plessey

Configure prefix for MSI Plessey



Enter Configuration



Exit Configuration



Enable Prefix Configuration for MSI Plessey

 


Disable Prefix Configuration for MSI Plessey

Configure prefix for Interleaved 2 of 5



Enable Prefix Configuration for Interleaved 2 of 5

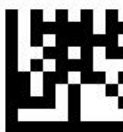

Disable Prefix Configuration for Interleaved 2 of 5

Configure prefix for IATA 2 of 5



Enter Configuration



Exit Configuration



Enable Prefix Configuration for IATA 2 of 5



Disable Prefix Configuration for IATA 2 of 5

Configure prefix for Matrix 2 of 5



Enable Prefix Configuration for Matrix 2 of 5



Disable Prefix Configuration for Matrix 2 of 5

Configure prefix for Straight2 of 5



Enter Configuration



Exit Configuration



Enable Prefix Configuration for Straight2 of 5



Disable Prefix Configuration for Straight2 of 5

Configure prefix for Pharmacode



Enable Prefix Configuration for Pharmacode



Disable Prefix Configuration for Pharmacode

Configure prefix for RSS-14



Enter Configuration



Exit Configuration



Enable Prefix Configuration for RSS-14



Disable Prefix Configuration for RSS-14

Configure prefix for Composite Code A



Enable Prefix Configuration for Composite Code A



Disable Prefix Configuration for Composite Code A

Configure prefix for Composite Code B



Enter Configuration



Exit Configuration



Enable Prefix Configuration for Composite Code B



Disable Prefix Configuration for Composite Code B

Configure prefix for Composite Code C



Enable Prefix Configuration for Composite Code C



Disable Prefix Configuration for Composite Code C

 
Configure prefix for PDF417




Enter Configuration



Exit Configuration

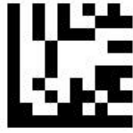


Enable Prefix Configuration for PDF417

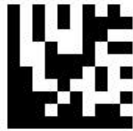 


Disable Prefix Configuration for PDF417

 Configure prefix for Micro PDF417

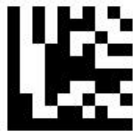

 Enable Prefix Configuration for Micro PDF417

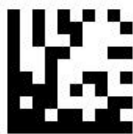

Disable Prefix Configuration for Micro PDF417

 
Configure prefix for Data Matrix




Enter Configuration



Exit Configuration

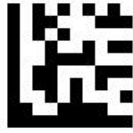


 Enable Prefix Configuration for Data Matrix

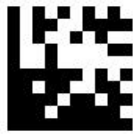


Disable Prefix Configuration for Data Matrix

 Configure prefix for QR

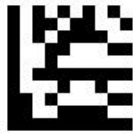

Enable Prefix Configuration for QR

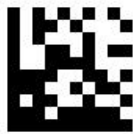 

Disable Prefix Configuration for QR

Configure prefix for Micro QR



Enter Configuration



Exit Configuration



Enable Prefix Configuration for Micro QR



Disable Prefix Configuration for Micro QR

Configure prefix for Aztec



Enable Prefix Configuration for Aztec



Disable Prefix Configuration for Aztec

Configure prefix for MaxiCode



Enter Configuration



Exit Configuration



Enable Prefix Configuration for MaxiCode



Disable Prefix Configuration for MaxiCode

Custom suffix for different types of barcodes



Add suffix to all types of barcodes



Enter Configuration



Exit Configuration



** Do not add suffix to all types of barcodes

Configure suffix for UPC-A



Enable Suffix Configuration for UPC-A



Disable Suffix Configuration for UPC-A

Configure suffix for UPC-E



Enter Configuration



Exit Configuration

 


Enable Suffix Configuration for UPC-E



Disable Suffix Configuration for UPC-E

Configure suffix for EAN-8

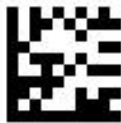

Enable Suffix Configuration for EAN-8



Disable Suffix Configuration for EAN-8

Configure suffix for EAN-13



Enter Configuration



Exit Configuration



Enable Suffix Configuration for EAN-13



Disable Suffix Configuration for EAN-13

Configure suffix for Code 128



Enable Suffix Configuration for Code128



Disable Suffix Configuration for Code128

Configure suffix for Code 39



Enter Configuration



Exit Configuration



Enable Suffix Configuration for Code 39



Disable Suffix Configuration for Code 39

Configure suffix for Code93



Enable Suffix Configuration for Code93



Disable Suffix Configuration for Code93.

Configure suffix for Code32



Enter Configuration



Exit Configuration



Enable Suffix Configuration for Code32



Disable Suffix Configuration for Code32

Configure suffix for Code11



Enable Suffix Configuration for Code11



Disable Suffix Configuration for Code11

Configure suffix for Codabar



Enter Configuration



Exit Configuration



Enable Suffix Configuration for Codabar



Disable Suffix Configuration for Codabar

Configure suffix for Plessey



Enable Suffix Configuration for Plessey



Disable Suffix Configuration for Plessey

Configure suffix for MSI Plessey



Enter Configuration



Exit Configuration

 


Enable Suffix Configuration for MSI Plessey



Disable Suffix Configuration for MSI Plessey

Configure suffix for Interleaved 2 of 5

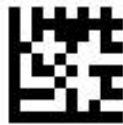

Enable Suffix Configuration for Interleaved 2 of 5



Disable Suffix Configuration for Interleaved 2 of 5

Configure suffix for IATA 2 of 5



Enter Configuration



Exit Configuration



Enable Suffix Configuration for IATA 2 of 5



Disable Suffix Configuration for IATA 2 of 5

Configure suffix for Matrix 2 of 5



Enable Suffix Configuration for Matrix 2 of 5



Disable Suffix Configuration for Matrix 2 of 5

Configure suffix for Straight 2 of 5



Enter Configuration



Exit Configuration



Enable Suffix Configuration for Straight 2 of 5



Disable Suffix Configuration for Straight 2 of 5

Configure suffix for Pharmacode



Enable Suffix Configuration for Pharmacode



Disable Suffix Configuration for Pharmacode

Configure suffix for RSS-14



Enter Configuration



Exit Configuration



Enable Suffix Configuration for RSS-14



Disable Suffix Configuration for RSS-14

Configure suffix for RSS-14 Expanded



Enable Suffix Configuration for RSS-14 Expanded



Disable Suffix Configuration for RSS-14 Expanded

Configure suffix for RSS-14 Limited



Enter Configuration



Exit Configuration



Enable Suffix Configuration for RSS-14 Limited



Disable Suffix Configuration for RSS-14 Limited

Configure suffix for Composite Code A



Enable Suffix Configuration for Composite Code A



Disable Suffix Configuration for Composite Code A

Configure suffix for Composite Code B



 
Enter Configuration



Exit Configuration



Enable Suffix Configuration for Composite Code B

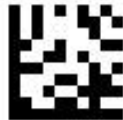

Disable Suffix Configuration for Composite Code B

Configure suffix for Composite Code C



Enable Suffix Configuration for Composite Code C



Disable Suffix Configuration for Composite Code C

Configure suffix for PDF417



Enter Configuration



Exit Configuration



Enable Suffix Configuration for PDF417



Disable Suffix Configuration for PDF417

Configure suffix for Micro PDF417



Enable Suffix Configuration for Micro PDF417



Disable Suffix Configuration for Micro PDF417

Configure suffix for Data Matrix



Enter Configuration



Exit Configuration



Enable Suffix Configuration for Data Matrix



Disable Suffix Configuration for Data Matrix

Configure suffix for QR



Enable Suffix Configuration for QR



Disable Suffix Configuration for QR

Configure suffix for Micro QR



Enter Configuration



Exit Configuration



Enable Suffix Configuration for Micro QR



Disable Suffix Configuration for Micro QR

Configure suffix for Aztec



Enable Suffix Configuration for Aztec



Disable Suffix Configuration for Aztec

Configure suffix for Maxicode



Enter Configuration



Exit Configuration



Enable Suffix Configuration for MaxiCode



Enable Suffix Configuration for MaxiCode

ASCII Code Table



Insert



Delete



Enter Configuration



Exit Configuration



Home



End



Up arrow



Down arrow



Enter Configuration



Exit Configuration



Left arrow



Right arrow



TAB



Backspace



 
Enter Configuration



Exit Configuration



Shift

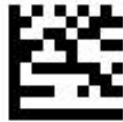

ESC



Page up



Page down



Enter Configuration



Exit Configuration



F1



F2



F3



F4



Enter Configuration



Exit Configuration



F5



F6



F7



F8



Enter Configuration



Exit Configuration

F9



F10



F11



F12



SPACE



Enter Configuration



Exit Configuration



!



"



#



\$



Enter Configuration



Exit Configuration



%



&



!



(



Enter Configuration



Exit Configuration



)



*



+



/



Enter Configuration



Exit Configuration



-



.



/



[



Enter Configuration



Exit Configuration



\



]



^



—



Enter Configuration



Exit Configuration



,



?



@



{



Enter Configuration



Exit Configuration



|



}



~



0



Enter Configuration



Exit Configuration



1



2



3



4



Enter Configuration



Exit Configuration



5



6



7



8



Enter Configuration



Exit Configuration



Enter Configuration



Exit Configuration

ASCII Code

Function Key



A

Ctrl+a



B

Ctrl+b



C

Ctrl+c



D

Ctrl+d



E

Ctrl+e



Enter Configuration



Exit Configuration



F

Ctrl+f



G

Ctrl+g



H

Ctrl+h



I

Ctrl+i



J

Ctrl+j



K

Ctrl+k



Enter Configuration



Exit Configuration



L

Ctrl+l



M

Ctrl+m



N

Ctrl+n



O

Ctrl+o



P

Ctrl+p



Q

Ctrl+q



Enter Configuration



Exit Configuration



R

Ctrl+r



S

Ctrl+s



T

Ctrl+t



U

Ctrl+u



V

Ctrl+v



W

Ctrl+w



Enter Configuration



Exit Configuration



X

Ctrl+x



Y

Ctrl+y



Z

Ctrl+z



a



b



Enter Configuration



Exit Configuration



c



 
d



e



f



g



Enter Configuration



Exit Configuration



h



 
i



j



k



l



Enter Configuration



Exit Configuration

m



n



o



p



q



Enter Configuration



 
Exit Configuration



r



s



t



u



v



Enter Configuration



Exit Configuration

w



x



y



z



Enter Configuration



Exit Configuration