

Scanning with Simplicity



SAVEO-RGDPTL-S12D-24G Quick Start Guide

Package contents

- 1 x SAVEO-RGDPTL-S12D-24G scanner 1 x Charging Cradle (with in-built 24Ghz Receiver)
- 1 x Micro USB cable 1 x Quick Guide

Contact us at:

Email:	US: +1-720-257-7070
inquiry@saveoscan.com	UK: +44-208-099-8071
Web: www.saveoscan.com	IRE: +353-1-685-4600

Limited Warranty

Saveo Scan provides a 2-year limited warranty on SAVEO-RGDPTL-S12D-24G.. This warranty does not cover any product which has been subject to improper use, neglect or unauthorized repair or installation. This warranty does not cover consumable parts. (Cables & batteries are consumables.)

Safety information

 * Don't put scanner in places of excessively high temperature, such as exposure to direct sunlight

* Don't use scanner in extremely humid conditions or in conditions of extreme temperature change

* The rechargeable battery is permanently built into the product and cannot be replaced.

* Never damage the rechargeable battery. Damaging the casing of the rechargeable battery might cause explosion or fire!



Connecting via 2.4Ghz Wireless

Getting Started: Plug the Cradle to a USB port on your computer.


Please Note: If you use US keyboard, It's plug and play. If you use other type of keyboard, please refer to "keyboard language" at the bottom of this page to configure the keyboard language before using



*RF 2.4G Transmit

The cradle contains the in-built 2.4Ghz Long-Range Wireless Receiver. The unit is a "Plug & Play" HID Device and does not require installation of a driver.

Connect the Cradle to your computer with the included USB cable

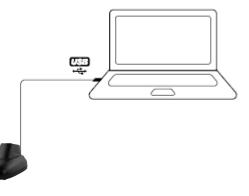

Scanner will appear as an external keyboard.

Once "Connected" is displayed, your device is paired to the scanner. Your scanner is now ready to use.

Language Mode



Spanish



Germany

Portugeuse

Italian







Power Saving Mode

Power saving mode is enabled by default and will put the scanner to sleep after 1 minutes inactivity. To wake up the scanner simply press the trigger.

Below are the barcodes to modify power saving times.

Disable Sleep

Never Enter Power Saving Mode



30 Minutes Enter Power Saving Mode after 30 minutes of inactivity



10 Minutes Enter Power Saving Mode after 10 minutes of inactivity



3 Minutes Enter Power Saving Mode after 3 minutes of inactivity



30 Seconds Enter Power Saving Mode after 30 seconds of inactivity



Scanning Mode

Direct Scan Mode (Default) Data is transmitted instantly to your device, upon a scan. Memory Scan Mode Data is stored and transmitted to device upon a upon request using the command codes below.







Transmit Firmware Version

Transmit Firmware Version in plain text to the connected device.

